

AEDC-TR-92-8

C. 3

Development and Installation of Continuous Water Monitoring Systems for the AEDC

ES Industries
701 South Route 73
Berlin, NJ 08009-2621

August 1992

Final Report for Period March 1991 through May 1992

Approved for public release; distribution is unlimited.

PROPERTY OF U.S. AIR FORCE
AEDC TECHNICAL LIBRARY

**TECHNICAL REPORTS
FILE COPY**

**ARNOLD ENGINEERING DEVELOPMENT CENTER
ARNOLD AIR FORCE BASE, TENNESSEE
AIR FORCE MATERIEL COMMAND
UNITED STATES AIR FORCE**

NOTICES

When U. S. Government drawings, specifications, or other data are used for any purpose other than a definitely related Government procurement operation, the Government thereby incurs no responsibility nor any obligation whatsoever, and the fact that the Government may have formulated, furnished, or in any way supplied the said drawings, specifications, or other data, is not to be regarded by implication or otherwise, or in any manner licensing the holder or any other person or corporation, or conveying any rights or permission to manufacture, use, or sell any patented invention that may in any way be related thereto.


Qualified users may obtain copies of this report from the Defense Technical Information Center.

References to named commercial products in this report are not to be considered in any sense as an endorsement of the product by the United States Air Force or the Government.

This report has been reviewed by the Office of Public Affairs (PA) and is releasable to the National Technical Information Service (NTIS). At NTIS, it will be available to the general public, including foreign nations.

APPROVAL STATEMENT


This report has been reviewed and approved.



PAUL LACASSE, Capt, CF
Propulsion Division
Directorate of Technology
Deputy for Operations

Approved for publication:

FOR THE COMMANDER



KEITH L. KUSHMAN
Director of Technology
Deputy for Operations

REPORT DOCUMENTATION PAGE			Form Approved OMB No. 0704-0188	
Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing this burden, to Washington Headquarters Services, Directorate for Information Operations and Reports, 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302, and to the Office of Management and Budget, Paperwork Reduction Project (0704-0188), Washington, DC 20503.				
1. AGENCY USE ONLY (Leave blank)	2. REPORT DATE August 1992	3. REPORT TYPE AND DATES COVERED Final - March 1991 - May 1992		
4. TITLE AND SUBTITLE Development and Installation of a Continuous Water Monitoring System for the AEDC		5. FUNDING NUMBERS F40600-91-C-0005		
6. AUTHOR(S) Przybyciel, M., Behm, J., and Sampey, T.				
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES) ES Industries 701 South Route 73 Berlin, NJ 08009-2621		8. PERFORMING ORGANIZATION REPORT NUMBER AEDC-TR-92-8		
9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES) Arnold Engineering Development Center/DOT Air Force Materiel Command Arnold Air Force Base, TN 37389-5000		10. SPONSORING/MONITORING AGENCY REPORT NUMBER		
11. SUPPLEMENTARY NOTES Available in Defense Technical Information Center (DTIC).				
12a. DISTRIBUTION/AVAILABILITY STATEMENT Approved for public release; distribution is unlimited.		12b. DISTRIBUTION CODE		
13. ABSTRACT (Maximum 200 words) A system to sample and analyze water from Rowland Creek at AEDC for hydrocarbon contaminants has been developed under a Small Business Innovation Research (SBIR) program contract. The online continuous water monitoring system involves the combination of two gas chromatographs (GC). The first instrument combines a gas/liquid sparger and a GC. The sparger uses an inert gas, helium, to remove and concentrate volatile organic chemicals which are then sequentially analyzed using a GC. The second gas chromatographic instrument involves the analysis of nonvolatile water samples through direct injection of water.				
14. SUBJECT TERMS water monitor water contaminant detector		15. NUMBER OF PAGES 58		
		16. PRICE CODE		
17. SECURITY CLASSIFICATION OF REPORT UNCLASSIFIED	18. SECURITY CLASSIFICATION OF THIS PAGE UNCLASSIFIED	19. SECURITY CLASSIFICATION OF ABSTRACT UNCLASSIFIED	20. LIMITATION OF ABSTRACT SAME AS REPORT	

PREFACE

The work completed herein was conducted by ES Industries, 701 South Route 73, Berlin, NJ 08009-2621 for Arnold Engineering Development Center (AEDC), Air Force Materiel Command (AFMC), Arnold Air Force Base, TN, under Phase II of a Small Business Innovation Research (SBIR) contract number F40600-91-0005, during the period March 1991 to May 1992. The Air Force Project Managers were Ms. Marjorie S. Collier and Capt (CF) Paul Lacasse. The principal investigator was Dr. M. Przybyciel of ES Industries. The reproducibles used in this report were supplied by the authors.

CONTENTS

	Page
1.0 INTRODUCTION	5
2.0 RESULTS AND DISCUSSION	5
2.1 System for Volatile Hydrocarbons	5
2.2 System for Nonvolatile Components	7
2.3 Alarms	8
3.0 SBIR START-UP	8
4.0 CONCLUSIONS	9
5.0 RECOMMENDATIONS	9
REFERENCES	10

ILLUSTRATIONS

Figure	Page
1. Sample Flow Path for AEDC Water Monitoring System	11
2. Sparging Flow Path for AEDC Water Monitoring System	11
3. Internal Tubing for AEDC Water Monitoring System	12
4. Chromatogram of a 25-ppb Volatiles Standard	13
5. Chromatogram of a 10-ppb Volatiles Standard	14
6. High-Speed Volatiles Chromatogram - 25 ppb	15
7. Linearity Check for Benzene, 1,1 Dichloroethane, 1,1,1 Trichloroethane, Trichloroethylene, and Methylene Chloride	16
8. Linearity Check for 1,2 Dichloroethane, Tetrachloroethane, Tetrachloroethylene, and Carbon Tetrachloride	16
9. Linearity Check for Ethylbenzene, Toluene, Chlorobenzene, 1,3 Dichlorobenzene, and 1,4 Dichlorobenzene	17
10. Diagram of Internal Tubing of Gas Analyzer to be Used for Nonspargable Components	17
11. Chromatogram from Direct Injection Instrument - Blank	18
12. Chromatogram from Direct Injection Instrument - Ethylene Glycol	19
13. Chromatogram from Direct Injection Instrument - JP-4	20
14. Chromatogram from Direct Injection Instrument - JP-8	21
15. Linearity Check for Ethylene Glycol	22

TABLES

1. Conditions and Settings for Sparger GC	23
2. Components for Volatile Analysis	24
3. Conditions for High-Resolution Scan	25
4. Conditions for Low-Resolution Scan	26
5. Components for Nonvolatile GC	27
6. Conditions for Nonvolatile GC	28

APPENDIXES

	Page
A. OPERATION AND CALIBRATION OF THE SIEMENS WATER ANALYZER	29
B. WATER ANALYZER CHECKLIST	37
C. ENCLOSURE INLET PLUMBING	41
D. ELECTRICAL PLATE COMPONENT LAYOUT	45
E. WIRING, POWER EE1/TB1	49
F. PLUMBING DISTRIBUTION	53

1.0 INTRODUCTION

The environmental quality of waterways is of ever-growing concern. One area of particular concern is the presence of organic chemical pollutants contained in waterways. A critical step in assessing these concerns involves the accurate measurement of organic pollutant levels contained in water samples. These critical measurements rely on the laboratory analysis of discrete samples. Samples for water analysis can be obtained via single point grab samples or composite samplers. Unfortunately, these sampling strategies provide little more than historical information. In addition, they suffer from possible sample degradation and require labor-intensive sample preparation techniques and analysis procedures. A more desirable sampling strategy would involve the continuous or semicontinuous online analysis of water samples using fully automated equipment. The automated instrument can provide real-time detection of organic pollutant levels and ensure that a directed response can be initiated.

Unfortunately, reliable automated online instruments for the analysis of water samples have not been commercially available. It is the intention of this project to develop and refine an instrument that continuously analyzes water samples and reports the analysis results rapidly to ensure that corrective action can be taken. In addition, it is critical that this instrument deliver results at part per billion (ppb) level for many contaminants.

The instrument developed for this project will be used to sample and analyze water from Rowland Creek. The instrument, through a rapid analysis of samples from Rowland Creek, will provide information to control diversion gates leading to a retention pond. The system will enable Arnold AFB to monitor and keep their discharges in compliance with NPDES permits.

The system developed for the study is based upon gas chromatography technology. This system involves the combination of two gas chromatographs (GC). The first instrument combines a gas/liquid sparger and a gas chromatograph. The sparger uses an inert gas, such as helium, to remove and concentrate volatile organic chemicals which are then sequentially analyzed using a gas chromatograph.

The second gas chromatographic instrument involves the analysis of nonvolatile water samples through direct injection of water. Using a specially designed injection valve, the direct injection system is rugged, but care must be taken to minimize the deposition of solids.

2.0 RESULTS AND DISCUSSION

2.1 SYSTEM FOR VOLATILE HYDROCARBONS

The system developed for the study is based upon gas chromatography technology. The system involves the combination of two gas chromatographs (GC). The first instrument combines a gas/liquid sparger and a gas chromatograph. The sparger uses an inert gas such as helium to remove and concentrate volatile organic chemicals which are then sequentially analyzed using a gas chromatograph. This GC is a Siemens SiCHROMAT 1-4 temperature-programmable instrument and requires a gas sample for analysis (settings for this instrument are contained in Table 1). This

gas sample contains the organic chemicals being analyzed and is delivered to the GC via the sparger shown schematically in Figs. 1 and 2.

Figure 1 shows the path of water into the sparger system. This water sample is delivered to the sparger vessel via a gear pump (a description of the gear pump is contained in the Appendix) installed in the system. During the pumping process the sample is heated to a constant temperature (55 °C). After the sample is delivered to the sparging vessel it overflows into a pressurization vessel which leads to a drain.

Figure 2 shows the path of the inert (helium) sparger gas. The helium is delivered precisely to the sparger using a pressure regulator and a flow control valve. A rotometer is placed in the gas flow path to monitor the rate of gas delivery. The helium is introduced into the sparging vessel through a glass frit. This frit disperses the gas into fine bubbles. These bubbles maximize the interaction of the gas and facilitate the removal of organic chemicals from the water column. The helium containing the volatile organic components is then passed through a loop contained in a gas injection valve. This valve is fitted into a heated compartment on top of the GC. The design of the valve allows the gas sample to continually flow, except during the injection period. During the injection period the gas contained in the sample loop is injected onto the GC for analysis. The volume of the injected sample is fixed by the size of the loop contained in gas injection valve; in the case of the AEDC system this volume is 1 mL.

A schematic diagram of the analytical system contained in the gas chromatograph is shown in Fig. 3. This diagram shows the configuration for the internal plumbing contained in the GC oven and is used to follow the sample flow and gas supplies through the GC oven. A flame ionization detector (FID) is used for the detection of pollutants. This analytical system relies on two types of technology for chemical component separation. The first type of separation technology involves open tubular capillary GC columns (Ref. 2). The interior surface walls of these columns are coated with a thin film (1-micron thickness) of polymer. The polymer coating acts to selectively retard the various chemical components that are passed through the capillary. The internal diameter of capillary tubing used to construct the GC columns is narrow (0.32 mm ID). The combination of the thin uniform polymer coating and the narrow diameter of the capillary GC columns enables the retarded components to travel through the column in tight time bands. These narrow bands allow the GC to separate numerous chemicals in a relatively short period of time. Many of these pollutants have similar molecular structure and physical properties.

The second type of separation technology involves the coupling of capillary columns. This technique is called "live" valveless column switching (Ref. 3). The GC contains a device, the T-piece, that acts both as a capillary column and pressure coupler. This device enables the operation of the "live" valveless column switching system. Using this technology, capillary columns of different lengths, polymer film thickness, and polymer composition can be coupled together. This allows for the complete refinement of the separation. In the case of the Arnold AFB system the "live valveless switching" is used to gain a complete separation of the components of interest in the shortest possible time. Using the valveless switch, trichlorofluoromethane, methylene chloride, and 1,1 dichloroethane are separated

only on the first column. The other components of interest are switched to the second column for their separation. In addition to column switching, the "T-piece" enables the backflushing of the first column to prevent the unwanted elution of higher boiling chemicals contained in materials such as JP-8.

Table 2 contains a list of the volatile organic chemicals determined by the sparger system and GC. This table also contains the detection limit (DL) for each of the chemicals analyzed by the sparger system. Figure 4 shows a chromatogram of the Table 2 components separated. Each component shown in the chromatogram is at the 25-ppb level.

This chromatogram represents the "high resolution" scan for the water analyzer system. The total analysis time for the "high resolution" scan is 25 min, including the cooldown of the GC oven. Figure 5 shows a chromatogram of a 10-ppb standards analyzed in the "high resolution" mode, and graphically displays the sensitivity of the system. The conditions for the GC oven and valve timing for the "high resolution" scan are contained in Table 3. Interferences from other chemicals, especially those contained in JP-4, will appear in the sparger analysis. This is particularly true at higher JP-4 levels; however, high levels of JP-4 will appear on direct injection GC, providing a flag for the sparger analysis. Chromatograms showing JP-4 interference on the sparger system were not produced for this study.

Figure 6 shows a high-speed chromatogram ("low resolution" scan) for the components contained in Table 2. Unfortunately, this chromatogram does not represent a separation of all the Table 2 components; however, this chromatogram is completed in 9.5 min. The "low resolution" scan is a viable way of reducing the analysis time for the system. The conditions for this analysis are contained in Table 4. The ultimate viability of the low-resolution scan will be determined when the instrument is installed and actually analyzes water from Rowland Ditch. This high-speed scan has a low resistance to interferences and may trigger a high number of false alarms. Fortunately, the instrument may be switched between low- and high-resolution modes rapidly and easily through the manual input of computer software commands.

Figures 7 - 9 are curves used to check the linearity for each component determined using the "high resolution" scan. These curves vary in concentration from 25 - 100 ppb and display the high degree of accuracy possible using the sparger and GC technology. Unfortunately, a linearity check for trichlorofluoromethane was not performed because an accurate standard of this volatile chemical could not be made at our facility.

2.2 SYSTEM FOR NONVOLATILE COMPONENTS

The second gas chromatographic instrument involves the analysis of nonvolatile water samples through direct injection of water. Using a specially designed injection valve, the direct injection system is rugged, but care must be taken to minimize the deposition of solids.

A Siemens P-101 process type GC is employed in the AEDC system for the analysis of nonvolatile components. A list of these components is contained in Table 5. The nonvolatiles GC relies upon the analysis of water samples using a direct injection technique. Water is continually passed through a liquid injection valve and, at a preset time, the valve is triggered, causing the water to be vaporized and swept onto a capillary GC column for analysis. Figure 10 shows a diagram of the internal plumbing for the nonvolatile system. This diagram shows the configuration for the internal plumbing contained in the GC oven and is used to follow the sample flow and gas supplies through the GC oven. Table 6 contains the operating conditions for this system.

The nonvolatile GC will require extensive maintenance and materials because dissolved salts in the water will deposit/build up in the instrument, causing possible failure of the system. However, the direct injection technology is a viable procedure for the ppm analysis of nonvolatile components such as JP-8. Glass-wool can be placed in the vaporization chamber to protect the system from high salt levels; however, because of the design of the liquid injection valve, extreme care must be taken when installing the glass-wool. Incorrect installation of glass-wool may damage the sample stem of the liquid injection valve.

Figure 11 shows a chromatogram of a blank water sample, and Fig. 12 shows a chromatogram for a 25-ppm standard of ethylene glycol. Figures 13 and 14 show chromatograms of JP-4 and JP-8, respectively. Each material is at the 2-ppm level. The water standards of these two materials contained undissolved components, even at the 1-ppm level. The undissolved fraction of the JP-4 and JP-8 appeared on the water's surface, and samples taken for analysis were below the surface. However, because of the undissolved fraction, a 1-ppm standard, when analyzed by the GC, probably represented a sample of actual lower concentration.

A linearity check for ethylene glycol is shown in Fig. 15. This curve is only linear over a short range (25 - 100 ppm) because of degradation of ethylene glycol in the chromatograph. Linearity checks for JP-4 and JP-8 were not performed, and information on the levels of these components should be obtained from the visual inspection of chromatograms.

2.3 ALARMS

The water analyzer system contains the provisions for alarms. These alarms can be triggered from either the levels of organics contained in a sample or the failure of the instrument. These alarms will output a dry contact closure. The alarms levels should be set at completion of the installation at AEDC.

3.0 SBIR START UP

The following is a list of observations made during the installation and start-up procedures for the Siemens P101 Process Gas Chromatograph and SiCHROMAT 1-4 at AEDC.

1. A complete written checklist detailing requirements of the installation should be distributed to the appropriate personnel involved in the site preparation. This list should include not only the electrical, sample, and

gas requirements, but also extend to the training and personnel to be involved with the installation and operation of the instrument(s). This checklist should be completed prior to the manufacturer's personnel arriving on site.

2. Most instruments of this nature are used to identify specific contaminants as opposed to fuels. That is to say, a fuel such as JP-4 would be injected into the instrument and analyzed for its various chemical components. With the P101, water is injected to identify four different components by virtue of their individual "fingerprints," based on what will mix or dissolve into the water.

3. Although the manufacturer provides detailed written materials on each analyzer, a summary description of their operation (Appendix A) should be created for each custom installation. The advantage of providing this material is a discussion of the specific application and a "quick" reference for the customer.

4. A daily, weekly, and/or monthly maintenance checklist should be provided to the customer for each installation (Appendix B). This list would give the customer the benefit of keeping the instrument(s) in top operating condition based on our experience with the instrument(s).

4.0 CONCLUSIONS

An automatic water analyzer system for determination of organic pollutants has been developed. The system can analyze volatile organic components at ppb levels with a minimum of operational maintenance. This analysis can be completed in less than 10 min; however, the information obtained in this mode is minimal. Using a 25-min analysis sequence, high-resolution information can be obtained for 17 individual chemicals.

The system also contains a GC for the analysis of nonvolatile components such as JP-4 and JP-8 using direct water injections. This system, which is not as rugged as the volatiles system, is able to analyze for chemicals that are difficult to detect using commercially available techniques.

The water analyzer delivered to AEDC is an integration of the two gas chromatographs. The system will transmit alarms at predetermined component threshold levels and will become an important part of the pollution control technology at the AEDC. Hopefully, by using continuous water analyzing technology the AEDC will be able to rapidly discover and eliminate pollution emission sources.

5.0 RECOMMENDATIONS

It is important to the start-up and the ongoing operation of the water analyzer that an "expert" trained by ES Industries be available at the AEDC. In addition, the plant operators should be trained and have a basic understanding of the operation of the water analyzer.

REFERENCES

1. Hoemer, G., Kuehn, W., and Leonhardt, D. "Vom Wasser." 59 Band 1982, pp. 115 - 128.
2. Jennings, W. *Analytical Gas Chromatography*. Academic Press, 1987.
3. Muller, F. and Oreans, M. *Chromatographie*, Vol. 10, No. 8 (1977), pp. 767 - 779.

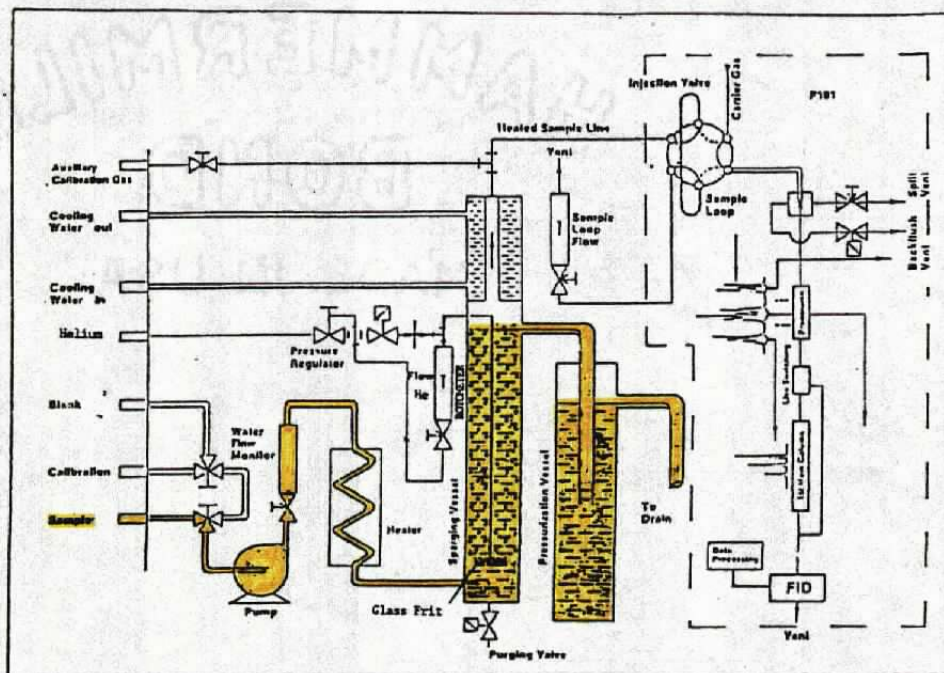


Figure 1. Sample flow path for AEDC water monitoring system.

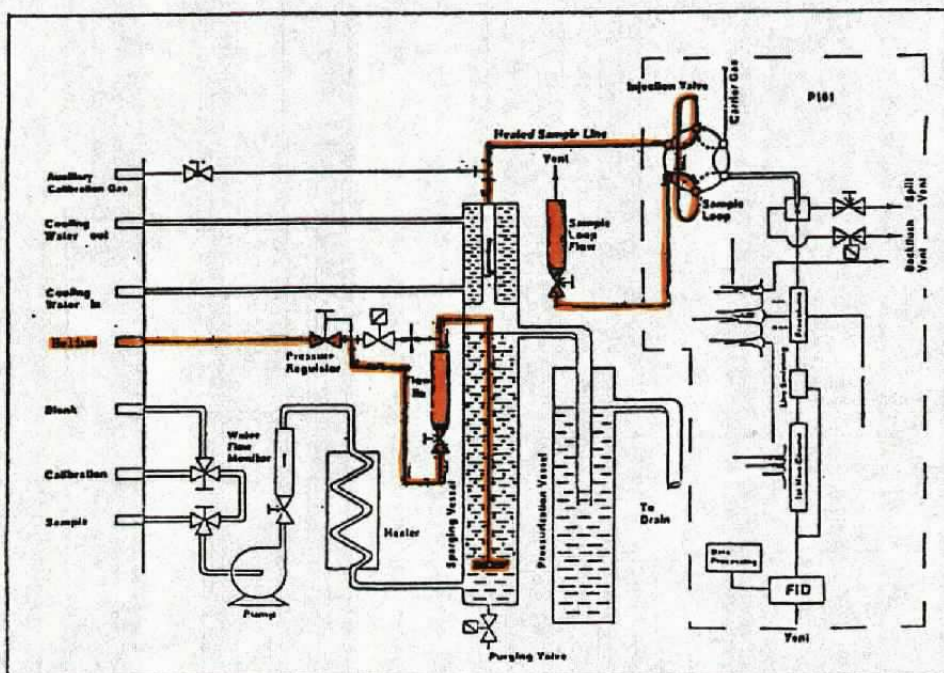


Figure 2. Sparging flow path for AEDC water monitoring system.

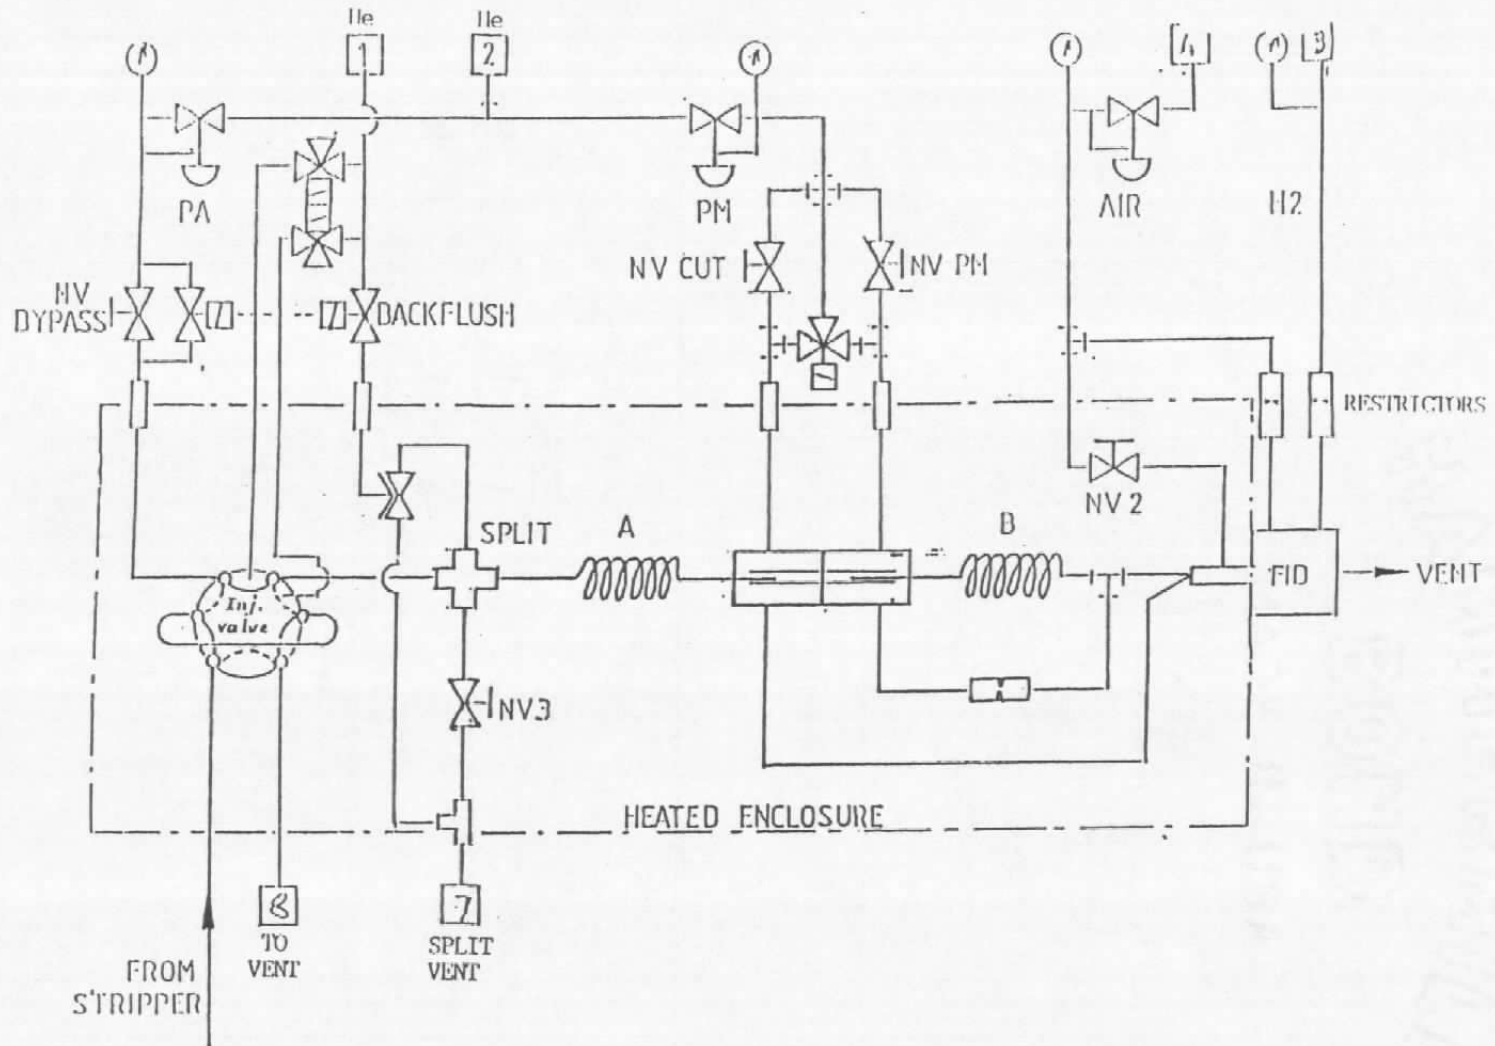
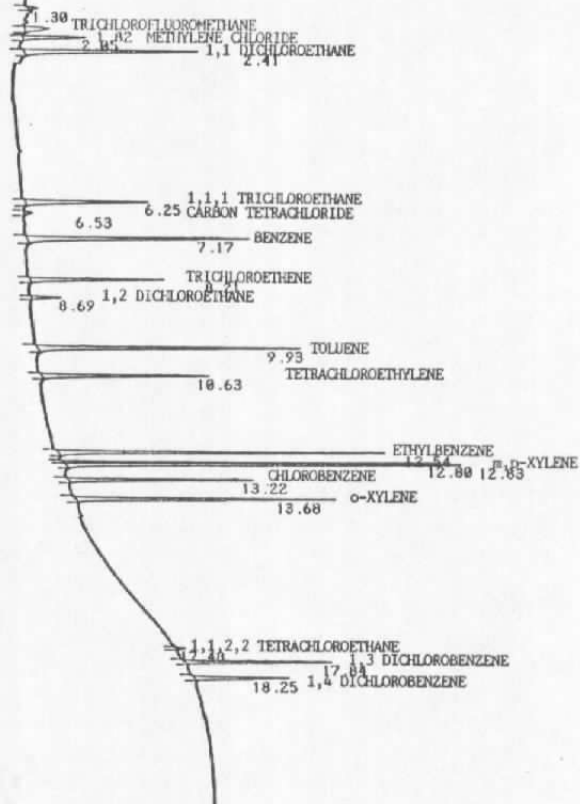


Figure 3. Internal tubing for AEDC water monitoring system.

/ .A/

CHANNEL A INJECT 02/06/92 11:21:31 STORED TO BIN # 6
AZ 0

DATA SAVED TO BIN # 6

SPARGER 02/06/92 11:21:31 CH= "A" PS= 1.

FILE 2. METHOD 5. RUN 76 INDEX 1 BIN 6


ANALYST: JFB

152

NAME	PPB	RT	AREA BC	RF
1	0.	1.3	20625 01	
2	0.	1.82	94826 01	
3	0.	2.05	165438 01	
4	0.	2.41	490060 01	
5	0.	6.25	358965 01	
6	0.	6.53	21250 01	
7	0.	7.17	593017 01	
8	0.	8.21	304865 01	
9	0.	8.69	61641 01	
10	0.	9.93	600390 01	
11	0.	10.63	371416 01	
12	0.	12.54	665789 01	
13	0.	12.8	570063 02	
14	0.	12.83	772250 03	
15	0.	13.22	361050 01	
16	0.	13.68	521407 01	
17	0.	17.48	16995 01	
18	0.	17.84	302705 01	
19	0.	18.25	191096 01	
TOTALS	0.		6404440	

Figure 4. Chromatogram of a 25-ppb volatiles standard.

CHANNEL A INJECT 01/30/92 13:19:20 STORED TO BIN # 55
AZ B

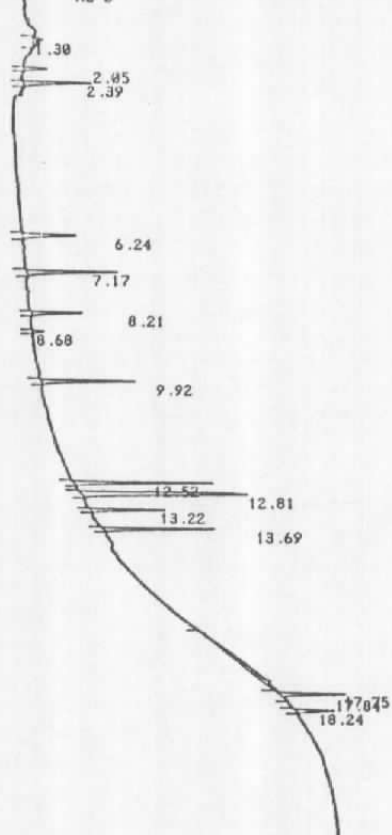

001

DATA SAVED TO BIN # 55

INPUT OVERRANGE AT RT= 5.77


SPARGER 01/30/92 13:19:20 CH= "A" PS= 1.

FILE 2. METHOD 5. RUN 5 INDEX 1 BIN 55

ANALYST: JFB

NAME	PPB	RT	AREA BC	RF
1	0.	1.3	40629 01	
2	0.	2.05	58063 01	
3	0.	2.39	187217 01	
4	0.	6.24	153615 01	
5	0.	7.17	239621 01	
6	0.	8.21	111740 01	
7	0.	8.68	23509 01	
8	0.	9.92	289324 01	
9	0.	12.52	274803 01	
10	0.	12.81	560046 01	
11	0.	13.22	140240 01	
12	0.	13.69	207120 01	
13	0.	17.75	262040 02	
14	0.	17.84	149009 03	
15	0.	18.24	77066 01	
TOTALS	0.		2695642	

Figure 5. Chromatogram of a 10-ppb volatiles standard.

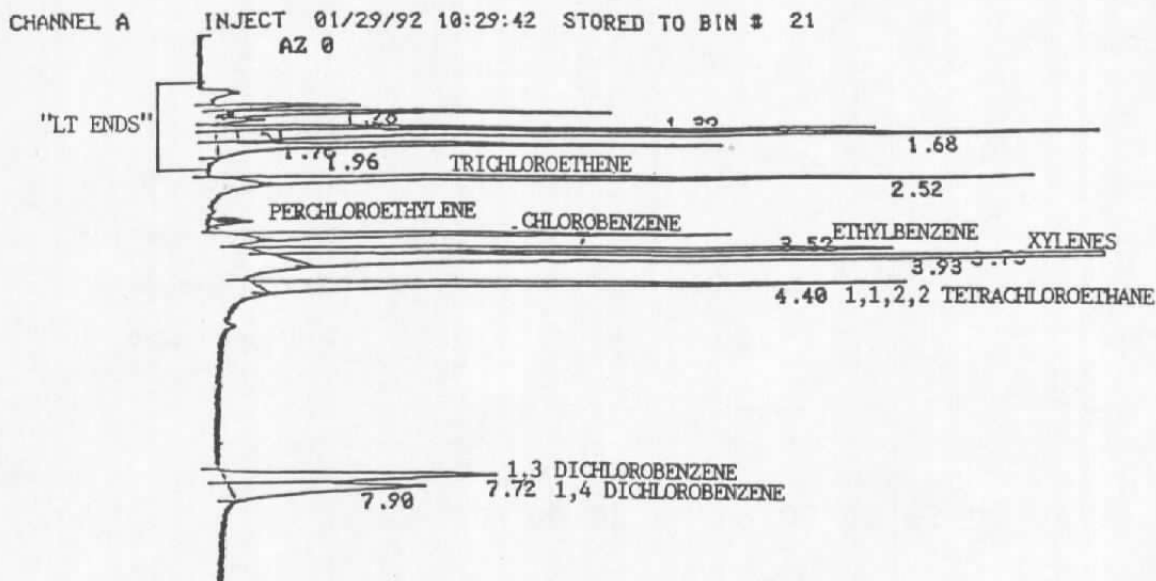

DATA SAVED TO BIN # 21

SPARGER 01/29/92 10:29:42 CH= "A" PS= 1.
FILE 3. METHOD 5. RUN 3 INDEX 1 BIN 21
ANALYST: JFB

NAME	PPB	RT	AREA BC	RF
1	0.	1.28	94261 01	"LT ENDS" = TRICHLOROFLUOROMETHANE METHYLENE CHLORIDE 1,1 DICHLOROETHANE 1,1,1 TRICHLOROETHANE CARBON TETRACHLORIDE BENZENE 1,2 DICHLOROETHANE TOLUENE
2	0.	1.39	278163 01	
3	0.	1.51	29169 02	
4	0.	1.68	483534 02	
5	0.	1.76	975784 02	
6	0.	1.96	445588 03	
7	0.	2.52	646320 01	
8	0.	3.52	438084 01	
9	0.	3.78	812248 02	
10	0.	3.93	1817324 03	
11	0.	4.4	734809 01	
12	0.	7.72	465098 02	
13	0.	7.9	389044 03	

Figure 6. High-speed volatiles chromatogram - 25 ppb.

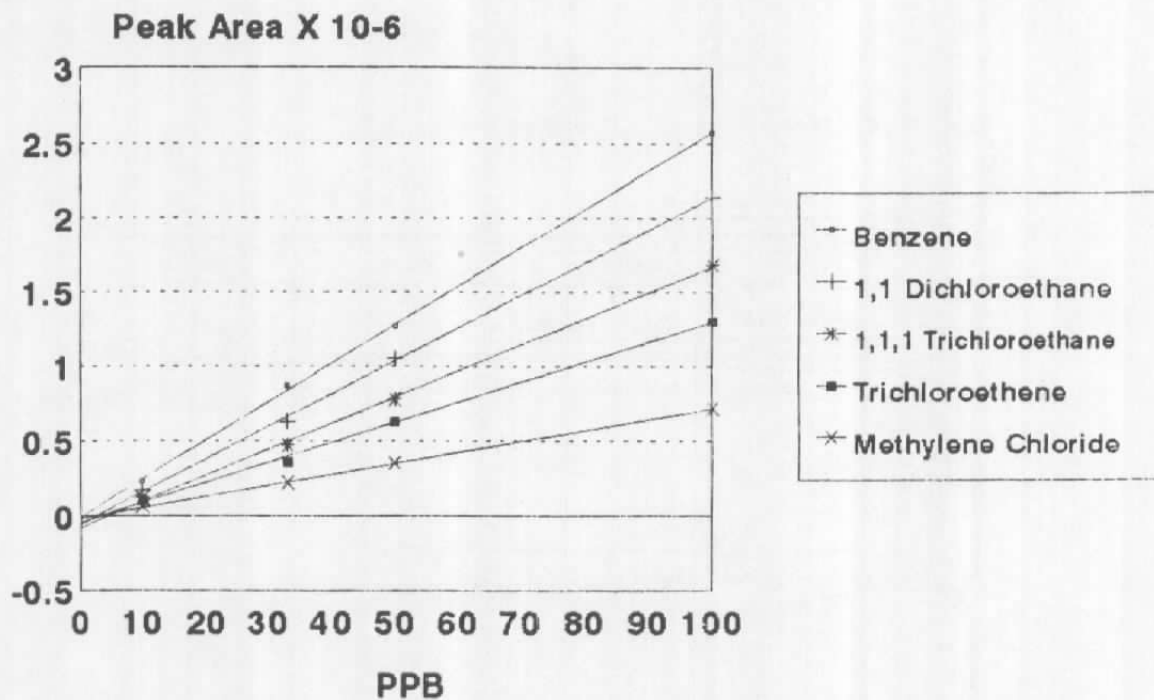


Figure 7. Linearity check for benzene, 1,1 dichloroethane, 1,1,1 trichloroethane, trichloroethylene, and methylene chloride.

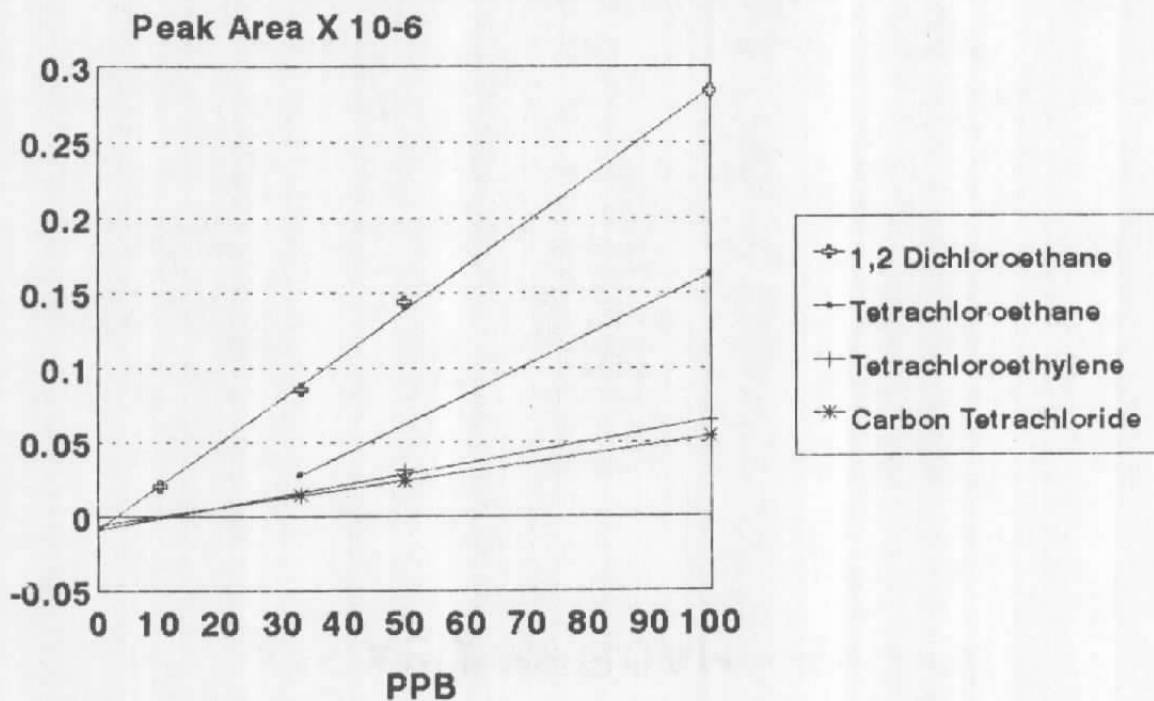


Figure 8. Linearity check for 1,2 dichloroethane, tetrachloroethane, tetrachloroethylene, and carbon tetrachloride.

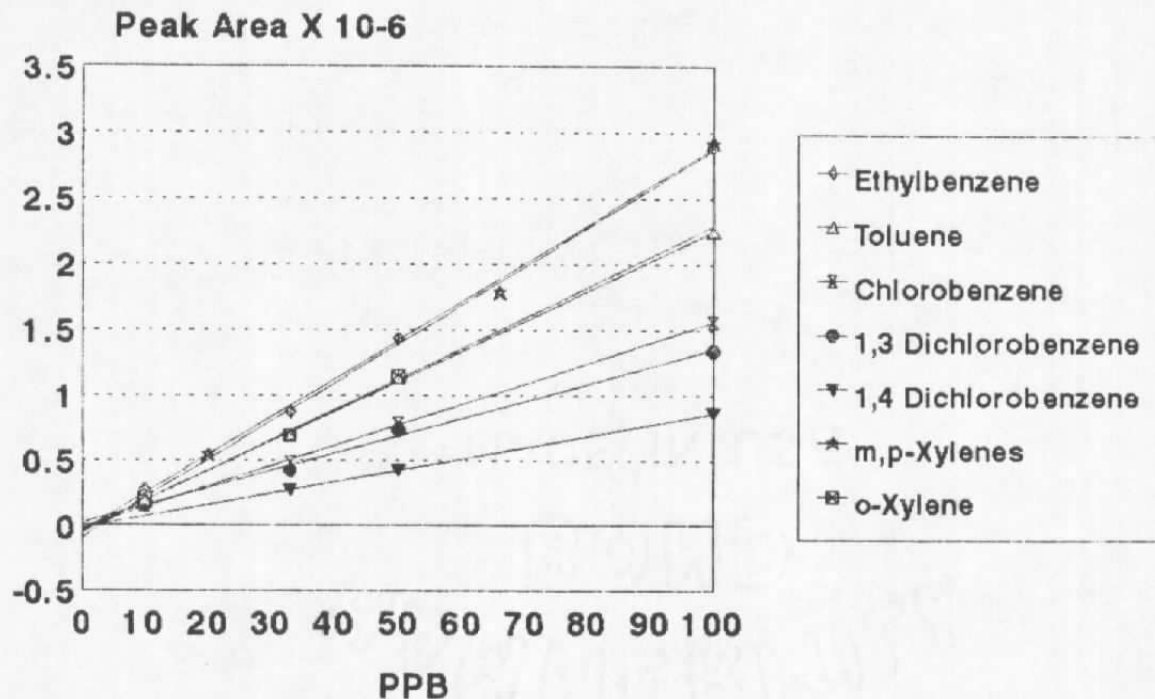


Figure 9. Linearity check for ethylbenzene, toluene, chlorobenzene, 1,3 dichlorobenzene, and 1,4 dichlorobenzene.


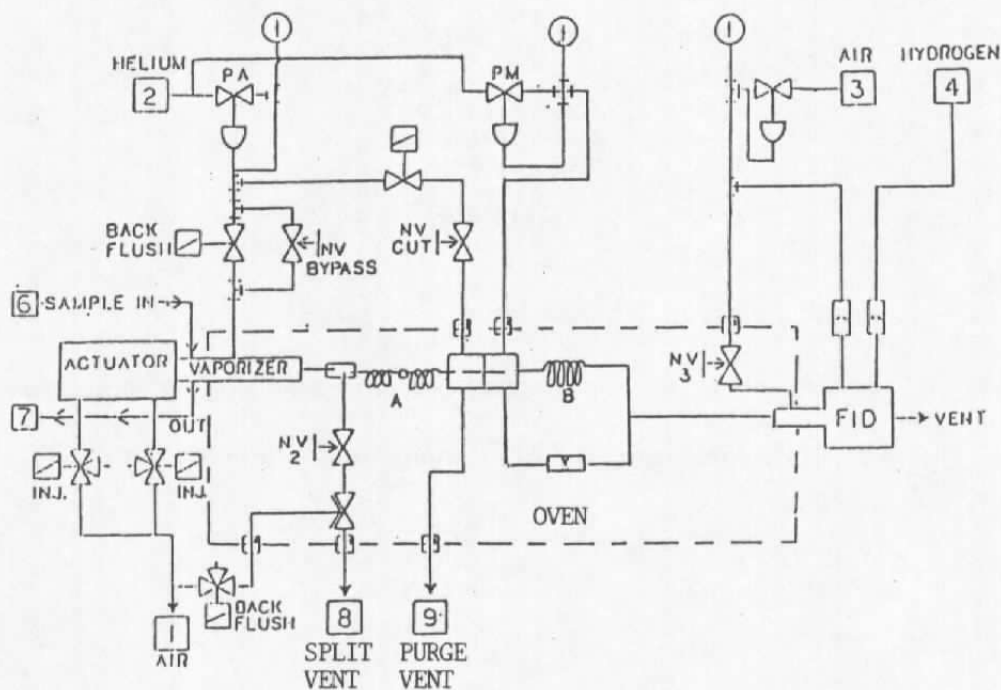


Figure 10. Diagram of internal tubing of gas analyzer to be used for nonsparable components.

CHANNEL B INJECT 02/01/92 11:25:53 STORED TO BIN # 106

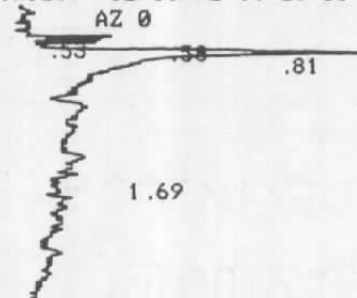

DATA SAVED TO BIN # 106

DIRECT INJECT 02/01/92 11:25:53 CH= "B" PS= 1.

FILE 1. METHOD 5. RUN 42 INDEX 1 BIN 106


ANALYST: JFB

NAME	PPB	RT	AREA BC	RF
1	0.	0.53	47007 02	
2	0.	0.58	60287 03	
3	0.	0.81	696497 01	
4	0.	1.69	606718 01	
TOTALS	0.		1410509	

WARNING - MEMORY AT 4. K - UNPROTECTED CHROMATOGRAMS WILL BE REPLACED

Figure 11. Chromatogram from direct injection instrument - blank.

CHANNEL B INJECT 02/03/92 09:29:49 STORED TO BIN # 2



DATA SAVED TO BIN # 2

DIRECT INJECT 02/03/92 09:29:49 CH= "B" PS= 1.
 FILE 1. METHOD 5. RUN 65 INDEX 1 BIN 2
 ANALYST: JFB

NAME	PPB	RT	AREA BC	RF
1	0.	0.59	53152 01	
2	0.	0.84	699458 01	
3	0.	1.07	141668 02	
4	0.	1.18	498606 03	
TOTALS	0.		1392884	


WARNING - MEMORY AT 0. K - UNPROTECTED CHROMATOGRAMS WILL BE REPLACED

Figure 12. Chromatogram from direct injection instrument - ethylene glycol.

CHANNEL B

INJECT 02/01/92 12:09:57 STORED TO BIN # 112

AZ 0

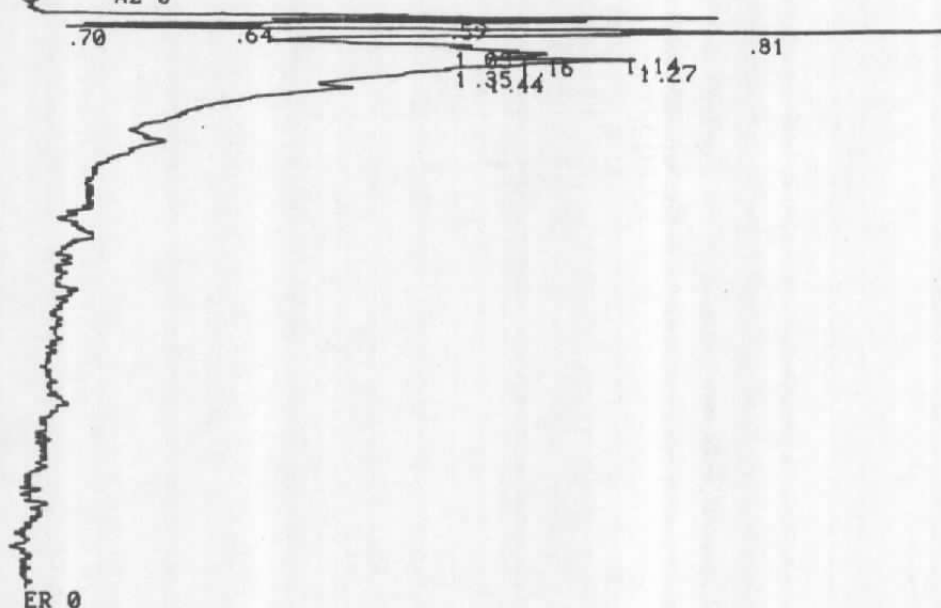

DATA SAVED TO BIN # 112

DIRECT INJECT

02/01/92 12:09:57

CH= "B" PS= 1.

FILE 1. METHOD 5.

RUN 47

INDEX 1

BIN 112

ANALYST: JFB

NAME	PPB	RT	AREA BC	RF
1	0.	0.59	994458 02	
2	0.	0.64	437748 02	
3	0.	0.7	109931 02	
4	0.	0.81	2672338 02	
5	0.	1.03	1091275 02	
6	0.	1.14	786163 02	
7	0.	1.16	1028351 02	
8	0.	1.27	1348640 02	
9	0.	1.35	764765 02	
10	0.	1.44	4111981 03	

02


TOTALS

0.

13345650

WARNING - MEMORY AT 4. K - UNPROTECTED CHROMATOGRAMS WILL BE REPLACED

Figure 13. Chromatogram from direct injection instrument - JP-4.

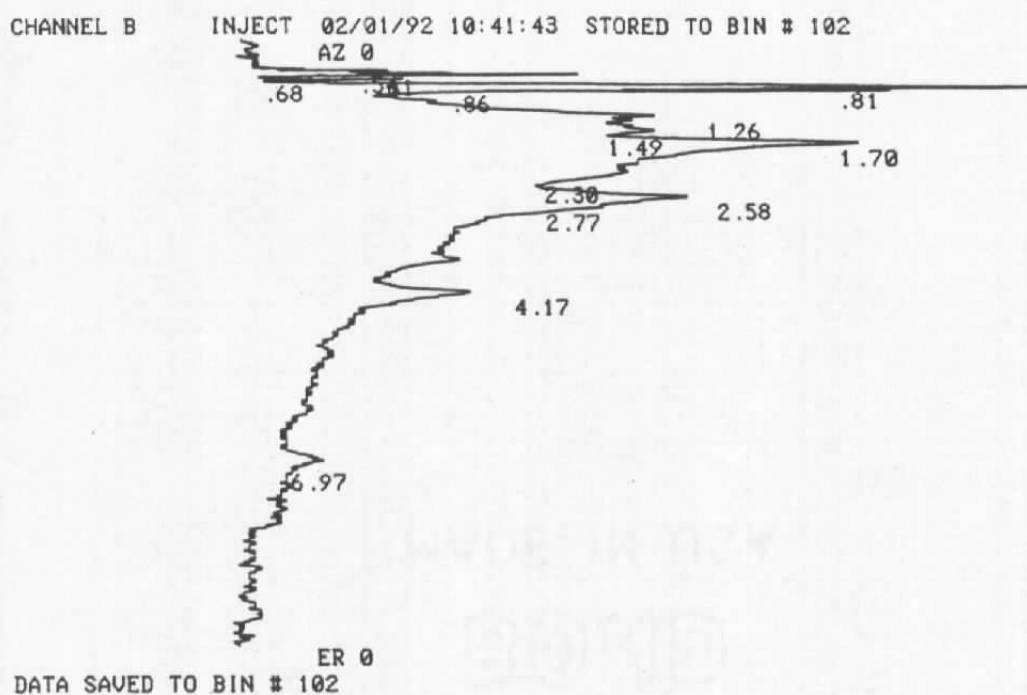

DIRECT INJECT 02/01/92 10:41:43 CH= "B" PS= 1.
FILE 1. METHOD 5. RUN 38 INDEX 1 BIN 102
ANALYST: JFB

NAME	PPB	RT	AREA BC	RF
1	0.	0.54	147505 02	
2	0.	0.61	283766 02	
3	0.	0.68	64899 02	
4	0.	0.81	1532226 02	
5	0.	0.86	318744 03	
6	0.	1.26	1125502 02	
7	0.	1.49	1170100 02	
8	0.	1.7	4423062 02	
9	0.	2.3	636022 02	
10	0.	2.58	1501949 02	
11	0.	2.77	715907 03	
12	0.	4.17	398499 01	
13	0.	6.97	148215 01	
TOTALS	0.		12466396	

WARNING - MEMORY AT 7. K - UNPROTECTED CHROMATOGRAMS WILL BE REPLACED

Figure 14. Chromatogram from direct injection instrument - JP-8.

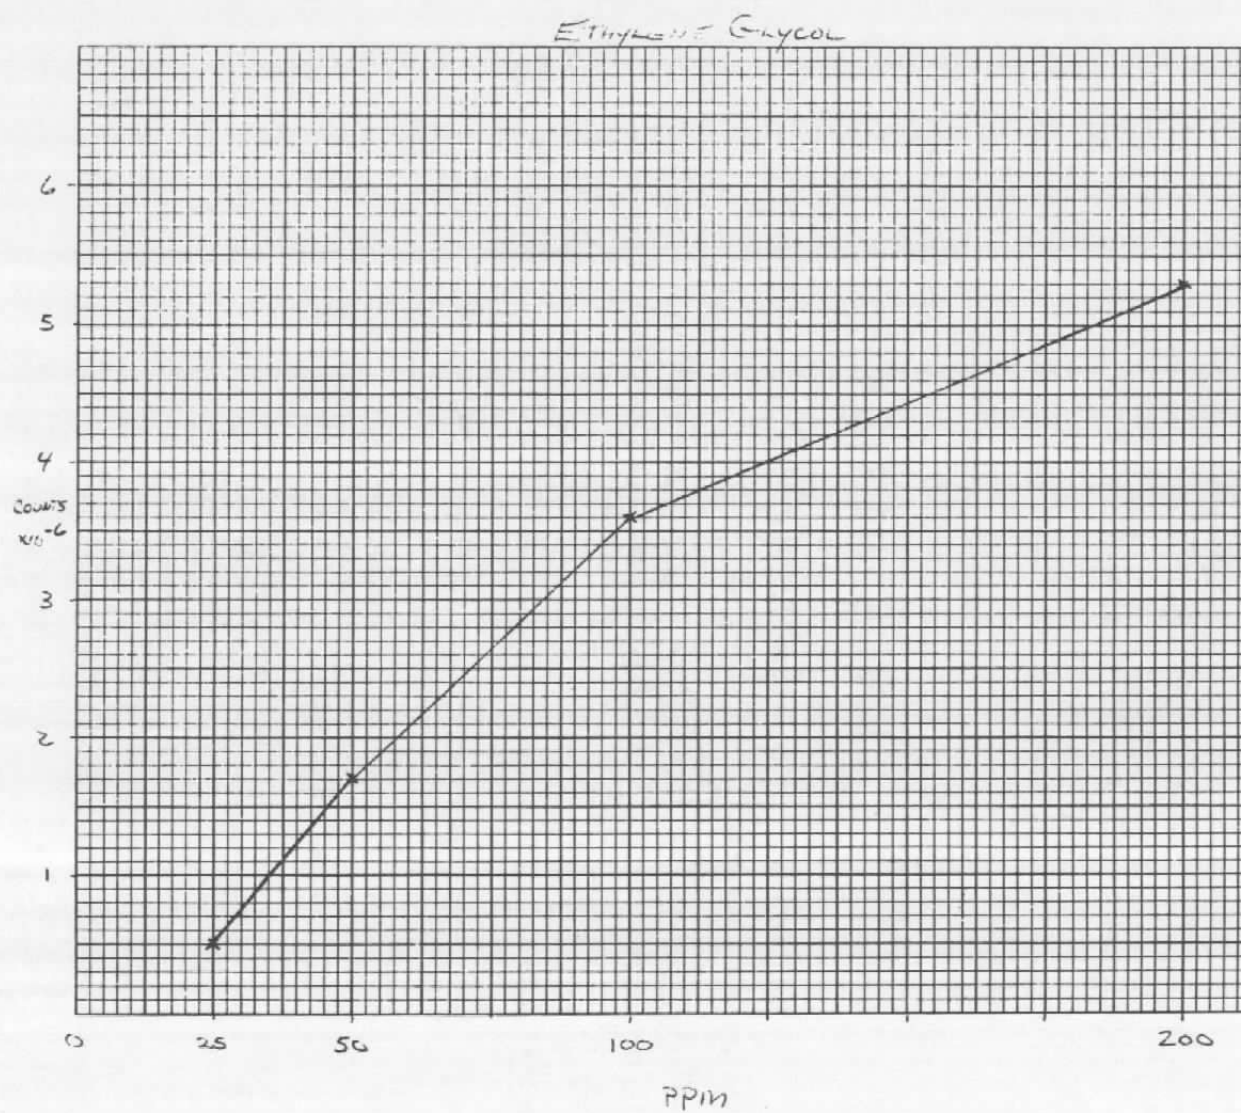


Figure 15. Linearity check for ethylene glycol.

Table 1. Conditions and Settings for Sparger GC

Application Data: SBIR SICHROMAT 1-4

Gas Supply

Control Medium: AIR
 Pressure: 4.0 bar

Carrier gas :
 PA-Pressure: 1.52 bar
 PM-Pressure: 0.91 bar

Combustion Air:
 Pressure: 2.00 bar Consumption: 500 ml/min

Hydrogen
 Pressure: 1.41 bar Consumption: 25 ml/min

Admixture Type: AIR
 Consumption: 20 ml/min

Injection Type: GIV Volume: 1.0 ml

Columns

	Material	Length (m)	I.D. (mm)	film thickness (micron)
A.	OV101	30	0.32	1
B.	OV225	30	0.32	1

Table 2. Components for Volatile Analysis

CHEMICAL	LIMITS OF DETECTION* (ppb)
Trichlorofluoromethane	15
Methylene Chloride	5
1,1 Dichloroethane	2
1,1,1 Trichloroethane	3
Carbon Tetrachloride	20
Benzene	2
Trichloroethene	3
1,2 Dichloroethane	10
Toluene	1
Tetrachloroethylene	2
Ethylbenzene	1
m-Xylene	1
p-Xylene	1
Chlorobenzene	2
o-Xylene	1
1,1,2,2 Tetrachloroethane	20
1,3 Dichlorobenzene	2
1,4 Dichlorobenzene	3

* = signal to noise of three

Table 3. Conditions for High-Resolution Scan

```

=====
S1CHROMAT                      Method 1
=====
OVEN      Initial temperature    60    C
PROGRAM   "      time           4    min.
          Rate                   8    C/min.
          Final temperature     160    C
          "      time           5    min.
-----
INJECTOR
1 Gas Sampling Valve           160    C
-----
DETECTOR
A      FID                     250    C
Range                   0
Attenuation              6
Polarity                 POS
Damping                  2
Baseline Offset          0    %
-----
VALVE
Inj.   Back. Cut   4     5     6     7     8     9     10    11    12
OFF    ON    ON   OFF  OFF  OFF  OFF  OFF  OFF  OFF  OFF  OFF
-----
TIME EVENTS TABLE
1      0.010      Back      OFF
2      0.010      Cut       ON
3      0.050      Inject    ON
4      0.300      Inject    OFF
5      3.100      Cut       OFF
6      14.000     Back      ON
7      21.500     Reset

```

Table 4. Conditions for Low-Resolution Scan

SICHROMAT1-4		ACTUAL METHOD		13.03.00 02:23							
=====											
OVEN			105		C						

INJECTOR											
1	Gas Sampl. Valve		120		C						

OPTION											

DETECTOR											
A	FID		200		C						
Range			0								
Attenuation			6								
Polarity			POS								
Damping			2								
Baseline Offset			0		%						

VALVE											
Inj.	Back	Cut	4	5	6	7	8	9	10	11	12
OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF

TIME EVENTS TABLE											
1	.01	Back			OFF						
2	.01	Cut			ON						
3	.05	Inject			ON						
4	.300	Inject			OFF						
5	10.00	Reset									

Table 5. Components for Nonvolatile GC

COMPONENT	LIMIT OF DETECTION (ppm)
Ethylene Glycol	10
JP-4	1
JP-8	1

Table 6. Conditions for Nonvolatile GC**Application Data: SBIR-Direct Injection****Gas Supply****Control Medium: Air****Pressure: 4.0 bar Consumption: 20 ml/min****Carrier gas: Helium****PA-Pressure: 0.60 bar****PM-Pressure: 0.30 bar****Combustion Air:****Pressure: 2.00 bar Consumption: 400 ml/min****Hydrogen****Pressure: 2.00 bar Consumption: 25 ml/min****Admixture Type: Air****Pressure: 2.00 bar Consumption: 20 ml/min****Oven purge Type: None****Analyzer Parameters:****Oven Temp. 140 Deg. C Actual value: 6.80 V Set value: 7.00 V****Detector Temp. 200 Deg. C Actual value: 10.12 V Set value: 10.00 V****Injector Temp. 350 Deg. C Set value: 0.00 V****Detector type: FID****Basic current: (uncompensated) 0.032 (*131.4 pA)****or****Bridge current: mA****Injection Type: LRV Volume: 2.4 ul****Columns**

Material	Length (m)	I.D. (mm)	film thickness (micron)
A. Methyl-5% Phenyl Silicone	5	0.25	0.25
B. Methyl-5% Phenyl Silicone	10	0.25	0.25

APPENDIX A
OPERATION AND CALIBRATION OF THE SIEMENS WATER ANALYZER

SBIR
OPERATION AND CALIBRATION
OF THE SIEMENS
P101 PROCESS GAS CHROMATOGRAPH

OPERATION

The P101 is electrically and electronically controlled through the front panel of the instrument. It is protected electrically through a main breaker panel located at the back of the rack in a locked box. All breakers are clearly marked (see drawing # B2900016).

Upon initial startup please insure that breaker "CB3" is in the up (on) position in order to supply power to the P101. In the front of the analyzer's lower left corner is a green button switch. After supplying all gases to the analyzer (helium, air, and hydrogen) at the pressures indicated in the documentation for approximately five (5) minutes press the green button switch to turn the instrument on.

Using a dental mirror or other similar object check to insure the detector has ignited. Do this by holding the mirror by the chimney of the detector and look for condensation. If the gas did not ignite enter the following commands: <Op. mode><3><1><2nd><Alloc.>; listen real close for five clicks coming from the top of the instrument (this would be the ignitor sending a spark to the detector). The format <> means to press the key indicated inside the brackets. Check again for condensation. (If the detector still will not ignite, try reducing the amount of air to the detector by about 1/2 bar.)

Once the detector has been ignited place or leave the instrument in operating mode 31 (as described above) for twelve to twenty four hours to equilibrate. If it has only been shut down for a few hours let it equilibrate for three or four hours, or until the baseline is steady.

When the instrument has equilibrated you may either begin injecting a sample or perform a calibration.

CALIBRATION

It is recommended that a standard be made for each contaminant of interest (ethylene glycol, JP-4, JP-8, or "heavy oil"). Therefore this instrument will require four separate standards each in it's own one gallon glass container. The standard should be fresh (less than four hours old) and kept sealed and cool until ready for use. Just prior to using it should be well mixed in order to simulate the sample that would normally be introduced to the instrument.

On the left side of the rack (as you face the rack), towards the back, are two 1/8 inch plastic tubes. The one that is on the fourth fitting up from the bottom is marked "Standard P101" (refer to drawing # B1500012); it and the plastic tube coming from the liquid injection valve (going to the drain) should be placed into the bottle containing the standard; turn the valve marked "Sample/Standard" to "standard". This will give you a closed system and recirculate the standard.

CALIBRATION P101 (cont.)

When you are ready to inject the standard turn on breaker "CB4" located in the electrical panel box (refer to drawing # B2900016). This will start pump #3 (refer to drawing # D1200013) and supply sample to the liquid injection valve on the P101. Adjust the flow, using the flow meter (Sample Flow 1), to approximately four liters per hour. Let the standard circulate for a few minutes before beginning the analysis. Start the analysis by entering the following command: <Op mode><5><0><Time>. At this point you should have heard several clicks (the valves) and the clock on the face of the control panel should be counting.

Allow the instrument to do several analyses. When the analyses appear to be consistent enter the following command: <Op mode><5><1><Time>. Let the analysis continue until you see all zeros in the clock, indicating that the analysis is complete. Now enter <Op mode><6><0><2nd><Comp>. In the window you will see the number 1, a decimal followed by another number. The number 1 indicates component number 1, which would be ethylene glycol. The number following would be the value calculated by the instrument for the amount of ethylene glycol in the standard. Assuming you are calibrating for ethylene glycol: if this number is correct, then do not change it and consider the instrument calibrated for that component; if this number is incorrect, enter the correct amount and press the <Off> key. (eg. If the instrument gave you an amount of 56.391 (ppb) and you made the standard to 50.250 ppb, press the following keys: <5><0><.><2><5><0><Off>. At this point the instrument will accept the new value and calculate a new factor.

On the other hand, if you were calibrating for JP-8, which is component number 3, you would do the following to read it's value after going to operation mode 60: <Tab><Tab>. Now you should see the number 3 in the window and some value. As before, if the value is correct consider the instrument calibrated. If it is incorrect, enter the correct value as described above.

If you had to enter a corrected value, enter the following commands: <Op mode><5><0>. Perform at least one more analysis to verify the instrument is analyzing correctly. If it isn't, repeat the above steps until it does.

If you did not have to enter new values, or you are satisfied the system is calibrated, turn off the pump "CB4", return the plastic tube from the sample valve to the drain, switch the "Sample/Standard" valve to "sample" and turn on the pump again. After one or two injections the system should be back to normal.

INJECTION

To operate the P101 g.c. in a normal cyclical mode it is imperative that the gases and temperatures (oven, detector and injector) to the instrument be set correctly and in accordance with the latest documentation, and the instrument be calibrated for the components as described above.

INJECTION P101 (cont.)

After setting the gas pressures correctly and turning on the instrument, a standard volt meter is used to insure the temperatures are adjusted correctly. Facing the instrument, to the left is a door, behind the door are several controls and receptacles for measuring temperature. Approximately in the middle of the panel (behind the door) you will see six (6) receptacles for banana plugs, next to which are two (2) potentiometers. Set the volt meter to VDC and place the "common" lead from the volt meter into the top right receptacle; place the "positive" lead from the volt meter into the top middle receptacle. The volt meter should give a reading of 8.0 VDC, or 160°C for the detector (each volt is equal to 20°C). If it isn't correct, adjust it using the potentiometer to the right. Repeat this for the oven using the receptacles just below in the same manner. This time you should get a reading of 6.0 VDC, or 120°C. Pull the instrument out from the rack. On top, towards the left is a computer board with two receptacles marked + and -. Place the leads from the volt meter in the respective receptacles and get a reading of -0.006 VDC. This reading may be adjusted using a small screwdriver on the potentiometer on this card.

Unless there has been a major change to the operating parameters of the instrument, once the above settings are made, they should never have to be adjusted. But it doesn't do any harm to periodically check them (once a year), or if there are problems with the instrument.

If any changes had to be made to the temperatures you **MUST** give the instrument a chance to equilibrate. If they were minor changes, say 3/10 of a volt or less, an hour will be more than sufficient, however anything greater than that and several hours or over night would be recommended.

Assuming all temperatures and pressures are correct, the instrument has had sufficient time to equilibrate, and it is calibrated for all components of interest, make sure there is sample flowing to the sample valve by checking that the "Sample/Standard" valve is in the "Sample" position, pump #3 is on ("CB4") and the flow meter #1 on the front is adjusted to 4 Liters per hour. Now enter the following command: <Op mode><3><1><Time>. If necessary reset the time to 00.000 by entering the following command: <0><Tab>. When the time is set to 00.000 enter the following command: <Op mode><5><0><Time>.

SBIR
OPERATION AND CALIBRATION
OF THE SIEMENS
SiCHROMAT 1-4

OPERATION

The SiCHROMAT 1-4 is electrically and electronically controlled at the front of the instrument. It is protected electrically through a main breaker panel located at the back of the rack in a locked box. All breakers are clearly marked [see drawing # B2500020].

The analyzer consists of two major components, the gas chromatograph (g.c.) and it's related control cabinet. The main power supply switch is a green button located in the upper right corner of the g.c., next to which is a white switch used to turn the oven fan on and off. The main power switch also controls the power to the control cabinet.

Before supplying power to the instrument, it is imperative that you provide the gases (helium, hydrogen, and air) to the analyzer at the correct pressures as described in the most current documentation provided.

Main power is provided through the electrical panel located in the back of the rack using breaker "CB5" (refer to drawing # B2500020); place both switches in the on (up) position. Return to the front of the g.c. and press the green button switch. At the same time turn on the oven fan by pressing the white button switch.

The control cabinet contains a small CRT; after power has been initiated to the analyzer and the computer has performed it's self-check a logo will appear on the screen. The computer will have already been pre-programmed with two methods, however it will be necessary for you to tell it which of the two programs you wish to operate.

At the top of the controller, to the right of the CRT is a button labeled "CONFIGURATION", press this key. The screen will now display a message; at the bottom of the screen you will see the definition of four "soft" keys (located under the screen), enter the one for "no change".

Now press the key labeled "METHOD" to display the method directory. In the upper right corner of the screen you will see the "active method" (most likely # 1), below you will see all the methods available.

Method 1 is the short (10 minute) method developed for the "normal" operation of this instrument, while method 2 is a longer (21.5 minute) temperature controlled program designed to be used when you want more definitive answers to a contamination problem.

To select between the two programs, press the soft key labeled "load", the number of the program you wish to run, and the "enter" key. It will also be necessary to turn on the heat to the oven, detector and the injector. This is accomplished by pressing the appropriate key (located in the bottom section of the control panel to the left of the numerical key pad), then pressing the soft key labeled "heating on/off". (eg. To turn on (or off) the heat to the detector, press the key labeled "detector" on the control panel. When the CRT displays the detector screen press the soft key labeled "heating on/off", and the screen will display the appropriate action.)

OPERATION SiCHROMAT 1-4 (cont.)

It may also be necessary to ignite the detector. In the lower section of the control panel, to the left of the temperature controls, you will see a key labeled "ignition". Pressing this key will cause the ignitor to trigger five times, sending a spark to the detector. It should be verified, through the use of a dental mirror, or similar object that the detector is lit (the detector is located on top of the g.c.).

It will take several minutes for the temperatures to stabilize. During this time the "not ready" light will be turned on. Until this light goes off and the "ready" light comes on it will not be possible to inject a sample.

This analyzer receives it's sample from a sparging unit located in the lower portion of the rack (refer to drawing # D1200013). The sparger consists of two mirror image halves. Each half consisting of a pump, a flow controller for water, a flow controller for gas (nitrogen), two solenoid valves, glassware, and heat traced sample lines. The latter is common to both halves.

CALIBRATION

As with all instruments, it will be necessary to verify the calibration. To do this you will have to make a standard containing all of the contaminants of interest in a large (5 gallon) glass container. This standard will be used to simulate a sample.

The analyzer uses a "Spectra-Physics Chromjet" integrator to calculate the concentration of each component in the sample. This is a separate piece of equipment connected to the back of the control cabinet. Like the analyzer, it is equipped with a battery to supply power in the event of a power failure; unlike the analyzer, it should NEVER be turned off using the on/off switch as this will cause it to lose it's memory. (If it is necessary to turn it off, simply unplug it.)

With a fresh standard already prepared and well mixed (using a magnetic table and stir bar) insert the plastic tube located on the side of the rack labeled "GC2" into the glass container. On the front of the sparger is a panel housing several valves and flow meters (three valves on top and three valves on the bottom of the panel). Also, above these, on a separate panel are located two rocker switches (white).

The standard must be placed into one of the two sets of glassware. This is done by selecting the appropriate valves and switches. To select the sparger on the right: 1) turn the top-most valve so that it points to the right; 2) next there are a pair of valves located just below; turn the one on the right so that it faces down (turn the other one so that it points to the left); go to the three valves on the bottom of the panel, and (3) turn the valve labeled "Sample/Calibration" to "Calibration"; (4) turn the valve labeled "Standard/Blank" to "Standard"; and (5) turn the valve labeled "Stripper 1/Stripper 2" to "Stripper 1". Now turn on the white rocker switch on the right (you should be able to hear the pump on the right come on).

At this point the standard should begin to replace any water in the front right stripping vessel and you should see gas bubbling through the water. Do not shut this off during the calibration.

CALIBRATION SiCHROMAT 1-4 (cont.)

Check the analyzer control panel to make sure it is "ready", indicated by the "ready" light being lit. Press the key labeled "Sequence"; the CRT will display a screen that will indicate "sample", "inj. no.", "method", etc. It is important that the "method" indicated here is the same method you want to calibrate. If it isn't, use the cursor key(s) to move to the method number; press the soft key labeled "select" to change the method number, and then press "enter".

Since you will want to run several analyses to check the calibration you'll want to set the instrument so that it performs this automatically. Next to the "sequence" key are two lights labeled "sampler" and "autostart". Press the "sequence" key. The soft keys displayed will include one labeled "mode", press it. Next press the soft key labeled "select" until "autostart" appears in the window; press "enter".

The first sample to be injected must be done manually, but only after the standard has had a chance to flow through the sparger for at least twenty (20) minutes at a flow rate of four (4) liters an hour. To initiate the start, press the "start" key. Be patient, it may take a few seconds for it to actually start while the computer checks all systems. At the start of the analysis the "run" light will come on and the system will automatically start the integrator. At the end of the analysis the integrator will print out the results, the analyzer will reset itself (the "not ready" light may come on), and then inject another sample.

At the end of two or three analyses you should be deriving consistent results. If the calibration is acceptable nothing has to be done except switch back to a sample. (See below.)

If the results are unacceptable, press "reset" at the end of the analysis. On the keyboard of the Chromjet is a key labeled "Calib", press it once, type "1" and then press the "enter" key. This will flag the next run as a calibration run. Next press the "start" key on the analyzer controller. Check the results after the second analyses.

Once you have achieved an acceptable calibration you can let the analyzer continue to run, however you must switch the valve labeled "sample/calibration" on the sparger back to "sample". You may also have to adjust the sample flow to four (4) liters per hour.

APPENDIX B
WATER ANALYZER CHECKLIST

SBIR
WATER ANALYZER
CHECK LIST

DAILY


1. Check all compressed gas cylinders.
 - Replace all "empty" cylinders as required
 - Leak check all fittings at the cylinders replaced
2. Check all pressure regulators for correct pressure as written on the gauges.
 - Adjust as required
 - Replace or repair as needed
3. Check sample flow from creek.
 - Inspect flow back to creek after the split
 - Repair or adjust as required
4. Check gas pressures at each instrument as indicated on each gauge.
 - If incorrect, determine reason and correct the situation
5. Check printer and integrator.
 - Insure that each is printing correctly
 - Insure that each has an adequate supply of paper
 - Correct situation as required
6. Check sample flow to each instrument.
 - PI01 should have a water flow of 4 liters per hour
 - SiCHROMAT 1-4 should have a water flow of 4 liters per hour
 - SiCHROMAT 1-4 have a gas flow of 3 liters per hour
 - Correct any discrepancies after determining the cause

MONTHLY

1. Leak check entire gas system using an appropriate leak detector such as "SNOOP".
 - Correct all leaks to the system
2. Calibration check of each analyzer for components of interest.
 - Make fresh standards for each instrument
 - Perform calibration check as described in operating manual
 - Make corrections as required
 - Record new data on appropriate forms and distribute copies as is appropriate
3. Supplies should be ordered as required for an appropriate period of time.
 - A minimum of two week supply of paper and pens should be available for the printer and the integrator
 - Spare parts should be replaced as soon as possible after being used


APPENDIX C ENCLOSURE INLET PLUMBING

APPENDIX D ELECTRICAL PLATE COMPONENT LAYOUT

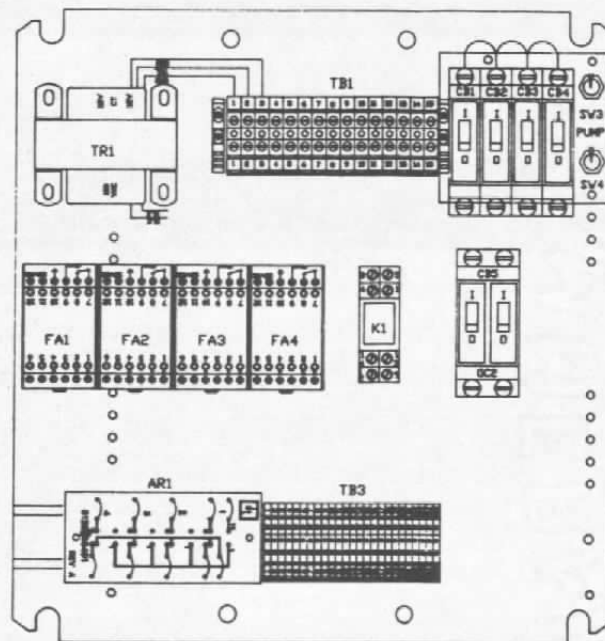


	RELEASED	2/18/91	
LTR	DESCRIPTION	DATE	APPROVED
REVISIONS			
<small>THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF DELAWARE TECHNOLOGIES, INC. MT. LAUREL, N.J. AND SHALL NOT BE REPRODUCED, OR COPIED, OR USED AS THE DIRECT OR INDIRECT BASIS FOR THE MANUFACTURE, DEVELOPMENT, OR SALE OF APPARATUS, PROCESSES OR PRODUCTS WITHOUT PERMISSION.</small>			

NOTES:

JOB NO.	REL	 DELAWARE TECHNOLOGIES, INC.
SBR		
DRAWN BY	DATE	ELECTRICAL PLATE COMPONENT LAYOUT
	2/18/91	
CHECKED BY	DATE	B2500020
DESIGN ACTIVITY APPD	DATE	B
D.DAWSON	2/18/91	
ACAD	25	SCALE
		SHEET 2 OF 2

APPENDIX E
WIRING, POWER EE1/TB1

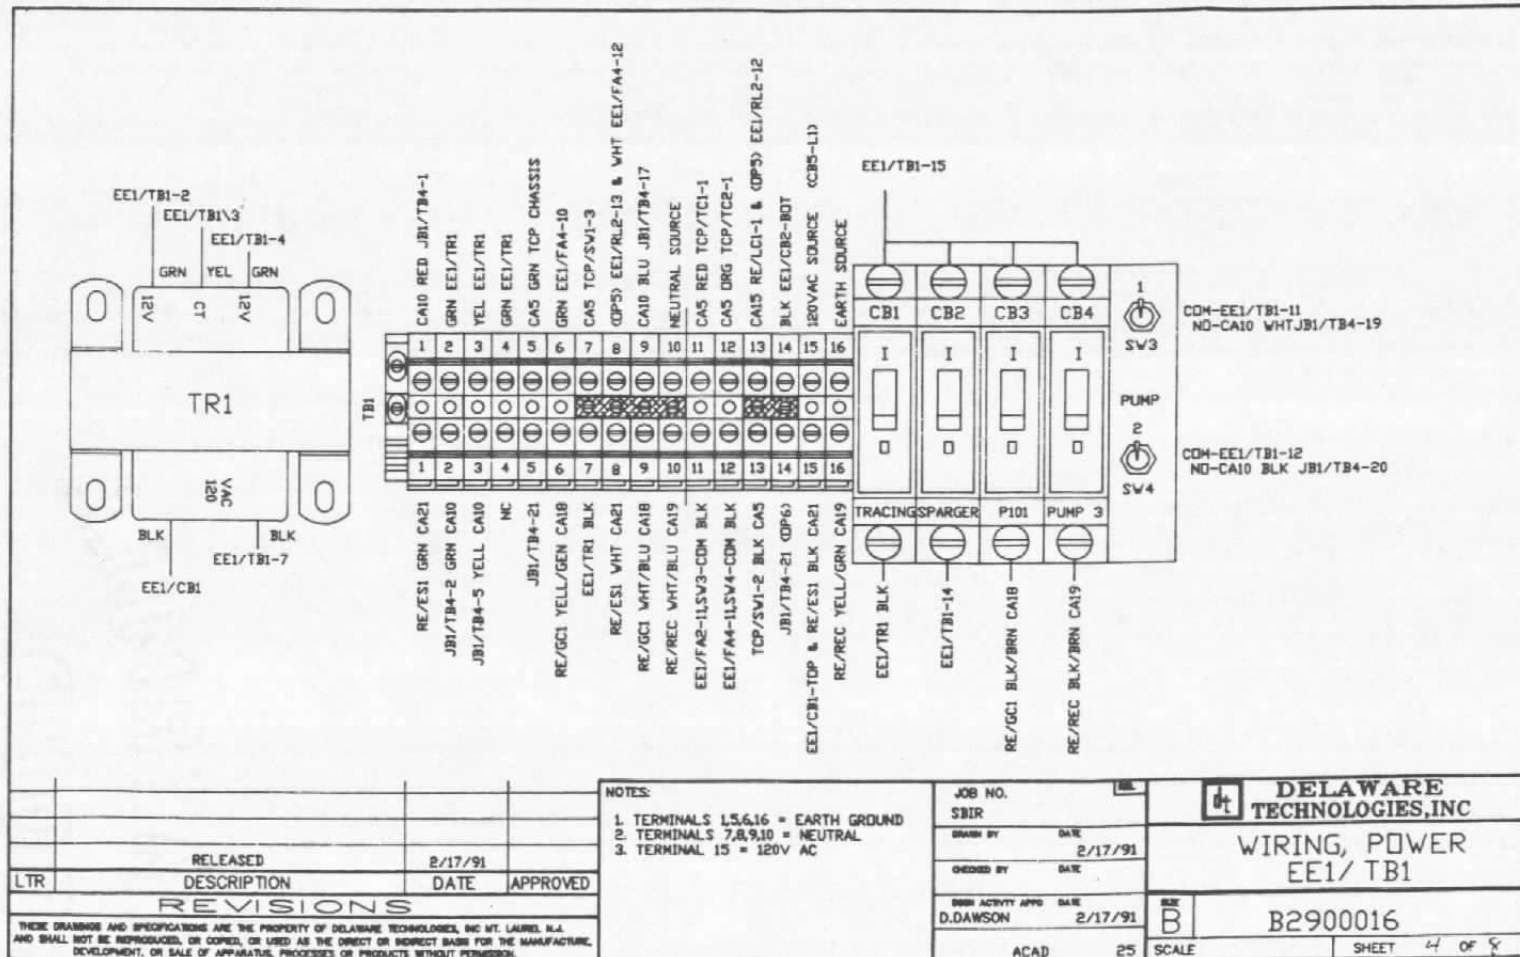

APPENDIX F PLUMBING DISTRIBUTION

